




SUMMARY • LEAVE ZIGBEE MESH & RESET

## CONTROL4 DIMMER • SWITCH • KEYPAD

- 1 13× TOP
- 2 4× BOTTOM
- 3 13× TOP

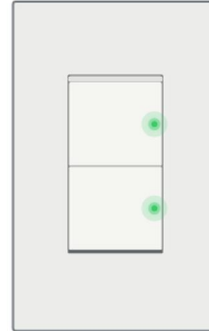

Steady taps, ~2–3/s. Keypad: top-most + bottom-most.

APPLIES TO: C4-APD120 • FPD120 • KD120  
SW120277 • KC120277

NOT: Mini-App mode (hold bottom 13 s)  
Legacy 6-button: top-left / bottom-left

● Done: both LEDs solid green

If nothing happens: check an LED is lit (power), then repeat.

[integratornotes.com/cards/001](https://integratornotes.com/cards/001)

**INTEGRATOR NOTES**

@integratornotes