



SUMMARY • IDENTIFY TO COMPOSER


CONTROL4 DIMMER • SWITCH • KEYPAD

- 1 Open the Identify window (60 s)
- 2 4× TOP
- 3 LED stops blinking •
address appears in Composer

Quick, steady taps. Keypad: top-most button.

APPLIES TO: C4-APD120 • FPD120 • KD120
SW120277 • KC120277

NOT: legacy 6-button (top-left)
thermostat (4× centre)

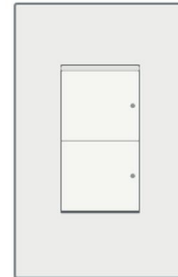

- Scanning: LED blinks yellow
- Joined: LED stops blinking

Out of time? Close the window, open it again, tap again.

Won't identify: remove it from the network, then identify again •
was on another project? 13-4-13 first.

integratornotes.com/cards/002

INTEGRATOR NOTES

@integratornotes