



SUMMARY • 938 • FACTORY RESET

KWIKSET HALO KEYPAD

PACK OUT • HOLD PROGRAM + PACK IN 30 s
BEEP + RED → RELEASE • PRESS PROGRAM
LATCH MOVES → GREEN = RESET

Touchscreen 939: same procedure

3 s release = door handing only

Halo Select: different lock, different reset


- RED flash = 30 s reached
- GREEN + RED = auto-handing
- GREEN = done • RED = repeat

integratornotes.com/cards/008

EXTERIOR



INTERIOR • COVER OFF

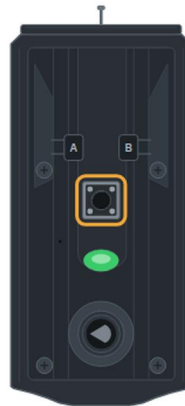

INTEGRATOR NOTES

@integratornotes