



## SUMMARY • LED FLICKER FIX

- 1 HOLD BOTTOM > NOTE THE FLICKER LEVEL
- 2 RANGE LEVELS > MIN ON ABOVE IT > SET
- 3 COLD START > TIME + LEVEL > MIN ON > SET
- 4 OFF • ON • HOLD DOWN = NO FLICKER

- ▮ Example: flickers at 20 % → Min On 25 %
- ▮ Min On is not Preset Level or Max On
- ▮ Still flickers? Bulb brand • neutral • Dimming Mode • on/off switch
- ▮ Property change only: nothing is erased

[integratornotes.com/cards/019](https://integratornotes.com/cards/019)

### Range Levels

|        |                                  |        |                                    |
|--------|----------------------------------|--------|------------------------------------|
| Min On | <input type="text" value="25"/>  | 1-100% | <input type="button" value="Set"/> |
| Max On | <input type="text" value="100"/> | 1-100% | <input type="button" value="Set"/> |

### Cold Start Values

|       |                                  |              |                                    |
|-------|----------------------------------|--------------|------------------------------------|
| Time  | <input type="text" value="500"/> | Milliseconds | <input type="button" value="Set"/> |
| Level | <input type="text" value="90"/>  | 0-100%       | <input type="button" value="Set"/> |

**INTEGRATOR NOTES**

@integratornotes